



# CELSI


*...the future of fire*

## HOME OWNERS INSTRUCTIONS & OPERATING MANUAL

### FLAMONIK ENCHANT & RAPTURE ELECTRIC FIRE

Part No.: B-1004535 & B-1004536

Model No.: CFECR0RE-ERP & CFECE0RE-ERP

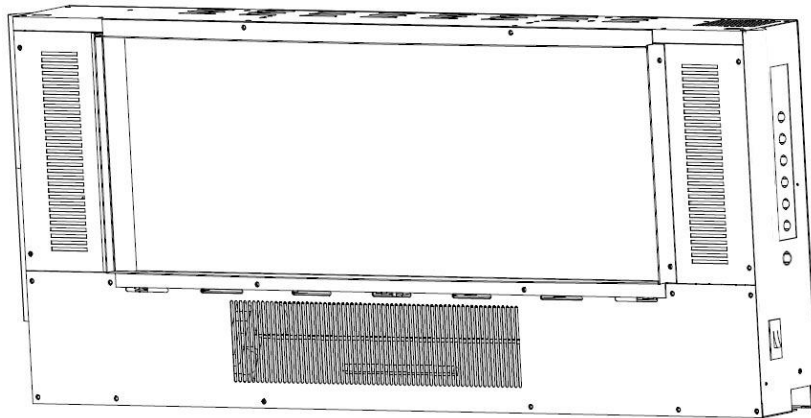

#### Packing Check list

<b>Package 1</b>	<b>1 off</b>	<b>Electric fire</b>
	<b>1 off</b>	<b>Remote control handset*</b>
	<b>1 off</b>	<b>Instructions manual</b>
	<b>1 off</b>	<b>Screw Package</b>
	<b>1 off</b>	<b>Fascia</b>
	<b>1 off</b>	<b>Crystal beads (depending on model)</b>

**\*THIS PRODUCT REQUIRES 2 X AAA BATTERIES FOR USE IN THE HANDSET (NOT SUPPLIED)**

## IMPORTANT

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved! Children shall not play with the appliance!

Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operation position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

# IMPORTANT INSTRUCTIONS


PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION AND/OR USE OF THIS ELECTRIC FIRE AND RETAIN FOR FUTURE REFERENCE.

**WHEN USING ELECTRICAL APPLIANCE, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSONS, INCLUDING THE FOLLOWING IMPORTANT SAFETY ADVICE.**

**READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.**

## Regarding installation of the appliance;

- This appliance is supplied with a rewirable plug fitted with a 13A fuse. Should the fuse or plug need replacing, and you are competent to do so, it must be replaced with a 13A fuse and the plug must be a 13amp BS1363A approved fitted with a 13A fuse.
- Connect this appliance to single-phase AC supply of the voltage specified on the rating plate.
- This heater must be earthed. If in any doubt consult a suitable competent person.
- Ensure that the plug socket-outlet connection for this appliance is accessible. It **MUST** be readily accessible for easy electrical isolation in the event of servicing and replacing components etc.
- This appliance **MUST NOT** be located immediately below an electrical socket-outlet.
- Avoid the use of an extension cord as this may overheat and cause a risk of fire.
- This appliance is fitted with an automatic thermal cut out to reduce the risk of damage in the event of abnormal operation e.g. when covered. If the heater stops operating whilst the flame effect continues normally this indicates that the cut out is in operation. If this occurs disconnect the power supply at the plug socket-outlet and ensure that any obstructions to the fan heater outlet or fan blades etc. are removed. The heater will automatically reset when cool enough. The thermal cut out **WILL NOT RESET** unless the obstruction is removed and the appliance cools. If the heater is still not operating after 10 minutes disconnect the appliance and seek expert advice.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard. The cable used **MUST** be capable of handling 2.5kW of power at 240V and **MUST** contain an earth wire.
- To completely shut this appliance off turn all the controls to OFF and remove the plug from the socket-outlet.
- Use the heater in a well-ventilated area.

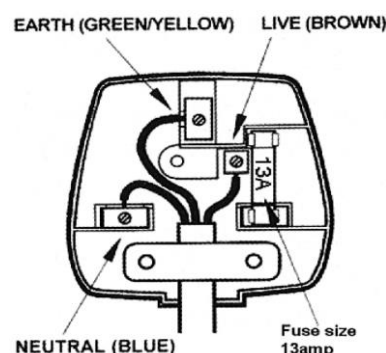

## Regarding persons operating the appliance;

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or learning disabilities, or lack of experience and knowledge, unless given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised at all times to ensure that they do not play with the appliance.
- Extreme caution is necessary when any heater is used by or near children, disabled or elderly persons and whenever the heater is left operating unattended.

## IMPORTANT INSTRUCTIONS

**DO NOT** cover the heater. The meaning of figure  is "WARNING! DO NOT COVER". This is to avoid over-heating of the product.

**DO NOT** leave the heater unattended while it is in use. Always turn the appliance to the OFF position and unplug it from the electrical outlet when not in use.

**DO NOT** operate this appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any way.

**DO NOT** use this appliance with a programmable timer or any other device that switches the appliance on and off automatically. In order to avoid a hazard due to inadvertent resetting of the thermal cut out., this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by an utility.

**DO NOT** use this appliance as a freestanding appliance. It must always be fixed to a wall, fireplace or floor etc.

**DO NOT** insert or allow objects to enter any ventilation or exhaust openings on the appliance. To prevent a possible fire do not block air intakes or exhaust openings in any manner.

**DO NOT** use this appliance on soft surfaces, such as beds, where openings may become blocked. Use the appliance on flat, dry surfaces only.

**DO NOT** place this appliance near flammable materials, surfaces or substances, as there may be a risk of fire. Keep flammable materials, surfaces or substances at least 1 meter from the front of the product and keep them away from the sides and rear.

**DO NOT** use this appliance in any areas where petrol, paint or other flammable liquids are stored e.g. a garage or a workshop as the appliance contains components capable of producing a spark.

**DO NOT** use this appliance in the immediate surroundings of a bath, shower or swimming pool. Make sure it cannot fall into water. Never touch the appliance with wet hands.

**DO NOT** let bare skin touch any hot surfaces to avoid burns and personal injury. This heater is hot when in use.

**DO NOT** use outdoors.

**CAUTION-** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

### **THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.**

Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

### **KEEP THESE INSTRUCTIONS IN A SAFE PLACE.**

# PRODUCT TECHNICAL DATA SHEET

<b>Supplier Name / Trademark</b>	CELSI
<b>Supplier Model Identifier</b>	B-1004535 Flamonik Rapture 27"
	B-1004536 Flamonik Enchant 36"
<b>Voltage</b>	230v AC 50HZ
<b>Fuse</b>	13 Amp
<b>Nominal Heat Output (Measured)</b>	1.5 kW
<b>Minimum Heat Output (Indicative)</b>	0.75 kW
<b>Maximum Continuous Heat Output</b>	1.5 kW
<b>Auxiliary Electricity Consumption at Nominal Heat Output</b>	NA
<b>Auxiliary Electricity Consumption at Minimum Heat Output</b>	NA
<b>Auxiliary Electricity Consumption at Standby Mode</b>	0.00038 kW
<b>Type of heat Output / Room Temperature Control</b>	With electronic room temperature control
<b>Other Control Options</b>	With open window detection
<b>Manufacturers Name and Address</b>	BFM Europe Ltd. Gordon Banks Drive, Trentham Lakes, Stoke-on-Trent, Staffs, ST4 4TJ Tel: 01782 339000

## Fire Dimensions

### Rapture 27"

(Heater only)	H 357 mm x W 625 mm x D 102mm
(With fascia fitted)	H 441 mm x W 686 mm x D 110mm

### Enchant 36"

(Heater only)	H 357 mm x W 855 mm x D 120mm
(With fascia fitted)	H 441 mm x W 916 mm x D 126mm

## INSTALLATION PREPARATION




**WARNING! DO NOT USE THIS APPLIANCE IF ANY PART HAS BEEN UNDER WATER.** IMMEDIATELY CALL A QUALIFIED SERVICE TECHNICIAN TO INSPECT AND TO REPLACE ANY PART OF THE ELECTRICAL SYSTEM IF NECESSARY.

- Open the packaging carefully and remove the foam.
- Remove and discard the plastic bag.
- Be responsible when handling the packing materials.
- Keep the original packaging for future transportation and/or storage.
- Check all accessories are removed from the packaging before storing it away for future use.

**NOTE: KEEP PLASTIC BAGS AWAY FROM CHILDREN!**

**CAUTION:** This carton includes a GLASS panel! Always use extreme caution when handling glass. Failure to do so could result in personal injury or property damage

### STRUCTURE AND PARTS

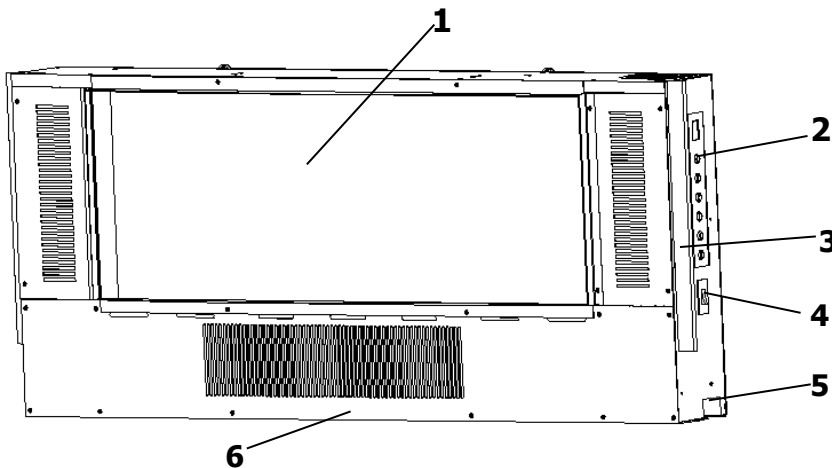


1. Screen
2. Manual Keypad
3. Back Light LED
4. ON/OFF Switch
5. Power Inlet
6. Air Outlet

### TOOLS REQUIRED

Magnetic Phillips Screw Driver



Rotary Hammer

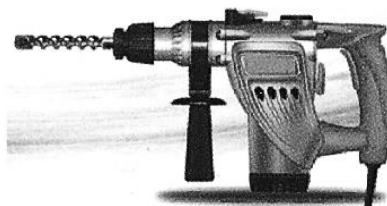

## LOCATING YOUR ELECTRIC FIREPLACE/HEATER

This appliance may be installed virtually anywhere in your home. However, when choosing a location please ensure that the general instructions are followed. For best results, install out of direct sunlight.

Make sure that the plug or fused spur is accessible after the electric fire is fitted.

Before connecting the appliance make sure that its rating corresponds to that of the mains supply and the fuse is the correct rating.

The appliance should be located close to a suitable mains socket-outlet to enable connection. The electrical socket-outlet must be easily accessible to allow disconnection.


**NOTE:** the appliance is fitted with an inlet plug and socket underneath the right side of the casing. Always make sure that it is fully pushed in and secure before operating the fire. Damage could occur if it is not fitted properly.



**WARNING!** KEEP DRAPERY AND OTHER FURNISHINGS AT LEAST 3'/0.9M FROM THE FRONT AND SIDES OF THE ELECTRIC HEATER

## CLEARANCE TO NON-COMBUSTIBLES

Sides.....	4in. (100mm)
Floor.....	15 3/4 in. (400mm)
Top.....	0 in. (0mm)
Back.....	0 in. (0mm)

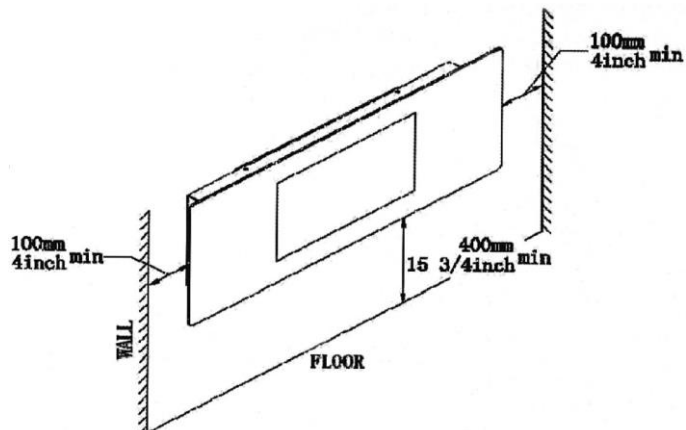

## INSTALLATION INSTRUCTIONS

Step 1: Using a screwdriver loosen the two screws that secure the wall mounting bracket to the top of the appliance and remove the wall mounting bracket as shown below (Figure 1).

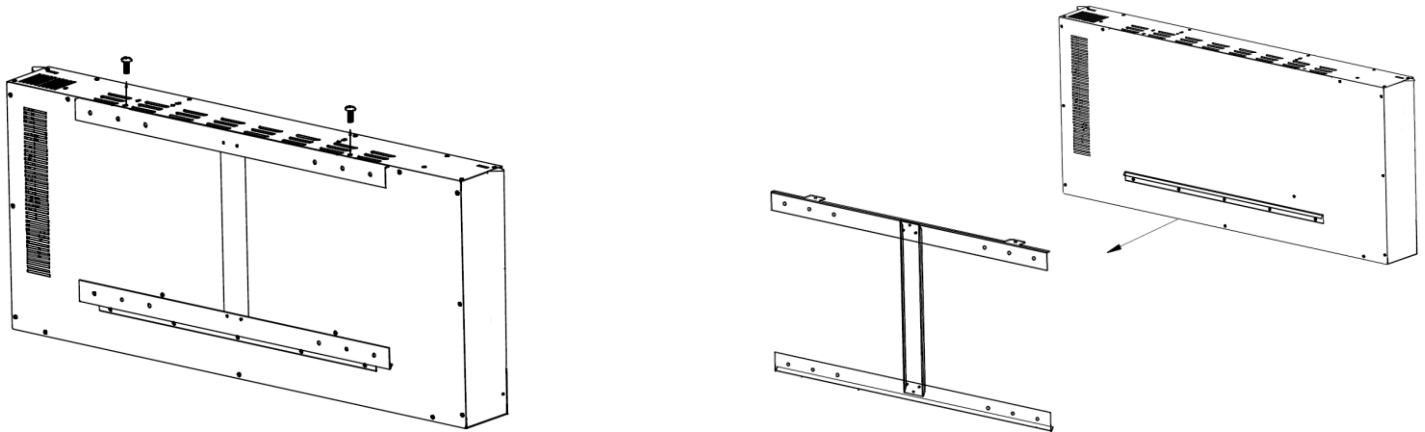


Figure 1

Step 2: Choose a solid and plain wall. Position the mounting bracket where the appliance is to be installed on the wall and ensure that the bracket is level. Using a pen mark the 4 holes through the 4 holes on the mounting bracket as shown below (Figure 2)

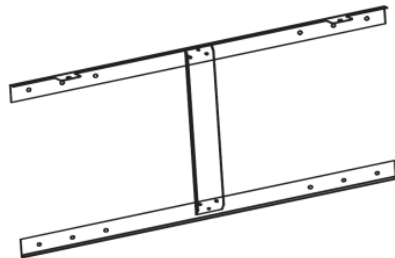


Figure 2

Step 3: Take away the mounting bracket and then drill four 8mm diameter holes on the wall. Insert plastic wall plug into the drilled holes (Figure 3). If installing the appliance on a solid wood wall there is no need to drill the holes in the wood and no need for the plastic wall plug.



Figure 3

## WALL-MOUNTED ELECTRIC FIREPLACE/HEATER

Step 4: Fix the mounting bracket using the four screws supplied (Figure 4).

Step 5: Hang the appliance on the hooks at the bottom of the bracket and push the top of the appliance into the mounting bracket. Now fix the appliance to the mounting bracket by refitting the two M4×8 screws which were removed in step 1. (Figure 5)

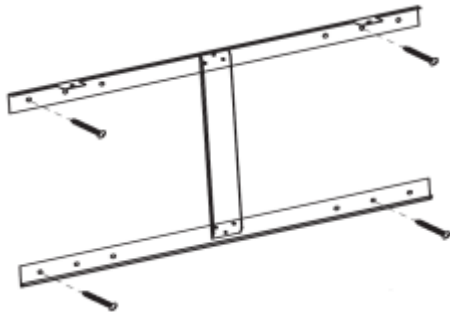


Figure 4

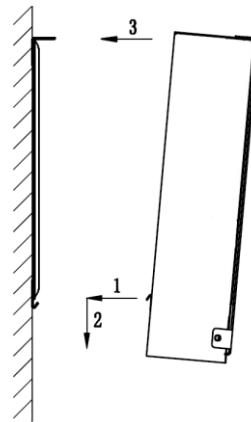


Figure 5

Step 6: Depending on the product purchased The Rapture has the option of a Coal effect fuel bed or loose crystal beads.

Fit the appliance front fascia by locating the two tabs into the slots on top of the electric fire as shown below. (Figure 6)

Secure the fascia in place at both sides using the two supplied screws.

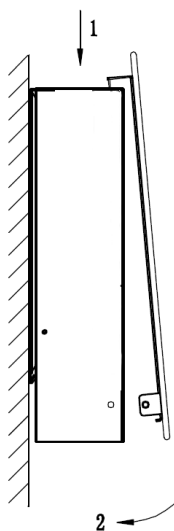


Figure 6

NOTE: Removal of the electric fire is carried out by following the previous steps in reverse order.



## OPERATING INSTRUCTIONS



**CAUTION!** THE UNIT'S POWER CORD MUST BE CONNECTED TO A PROPERLY EARTHED AND PROTECTED 230V OUTLET. ALWAYS USE EARTH FAULT PROTECTION WHERE REQUIRED BY THE ELECTRICAL CODE.

This appliance can be operated by both a remote control and a manual keypad on the product. Once the unit has been properly connected to an earthed electrical socket-outlet ensure the manual On/Off switch, located on the right hand side of the appliance, is in the 'ON' position.

### MAUNAL ON/OFF SWITCH


This switch turns the appliance on/off. The manual on/off switch must be in the 'ON' position when using both remote and manual operation.



**WARNING!** DO NOT OPERATE THE UNIT IF IT IS DAMAGED OR HAS MALFUNCTIONED. IF YOU SUSPECT THE UNIT IS DAMAGED PLEASE CALL A QUALIFIED SERVICE TECHNICIAN TO INSPECT AND TO REPLACE ANY PART OF THE ELECTRICAL SYSTEM IF NECESSARY.

## • The Fireplace/Heater Unit

On the top right side plate of the fireplace/heater unit is the control panel. This panel contains the buttons to properly operate the fireplace/heater unit. Refer to below figure for placement of the control buttons.

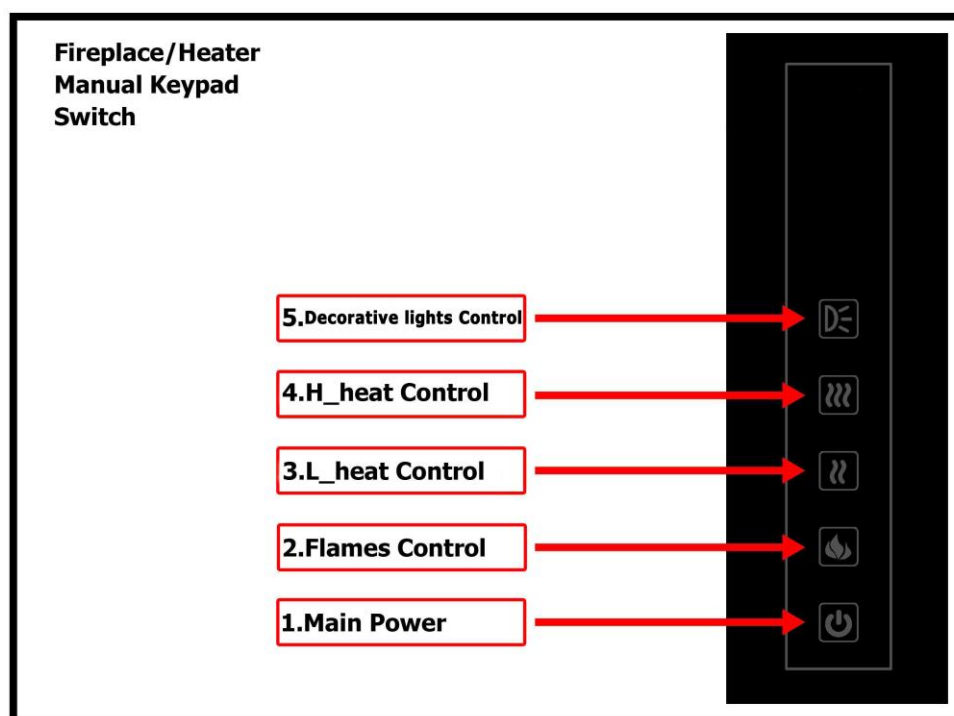

The first button on the control panel is the **(1) Main Power** button which is used to switch the appliance ON and OFF

## WALL-MOUNTED ELECTRIC FIREPLACE/HEATER

The next button is the **(2) Flame Control** button. Pressing the button once turns on the flame and fuelbed lights only. Further presses of the button will cycle through all the available colours as listed below and eventually back to OFF.

BUTTON PRESS	Flame State	Fuel bed Colour
1 <sup>st</sup> press	ON	Orange
2 <sup>nd</sup> press	ON	Blue
3 <sup>rd</sup> press	ON	Orange & Blue
4 <sup>th</sup> press	ON	Dynamic (cycle all colours)
5 <sup>th</sup> press	OFF	OFF

Pressing the next button **(3) L heat Control**, cycles the low heat ON and OFF, whilst the **(4) H\_heat Control** button cycles the high heat On and OFF. The fuel bed lights will flash one time to indicate that the heat function is ON or OFF.

### Lock or unlock heat function mode:

When the appliance is ON, pressing and holding the **(4) H\_heat Control** button for 10 seconds will flash the fuel bed lights 6 times to show the heater function has been locked. Each time you press either **(3) L heat Control** or **(4) H heat Control** buttons, the fuelbed lights will flash 6 times to show the heat mode is locked.

To unlock the heat function, press and hold the **(4) H\_heat Control** button for 10 seconds until the fuel bed lights flash 6 times to show the heater function has been unlocked.

The final button is the **(5) Decorative lights Control** button which turns ON the sidelights, Further presses of the button will cycle through all the available colours as listed below and eventually back to OFF.

BUTTON PRESS	Sidelights Colour
1 <sup>st</sup> press	Orange
2 <sup>nd</sup> press	Blue
3 <sup>rd</sup> press	Magenta
4 <sup>th</sup> press	Dynamic (Cycle all colours)
5 <sup>th</sup> press	OFF

## • Remote Control Button Function

Remove the battery cover on the back of the handset by sliding downwards and insert 2 x AAA batteries ensuring that the batteries are fitted correctly. Refit the battery cover.

Ensure that the ON / OFF Power Switch on the fire is in the ON position.

### OPERATING INSTRUCTION WITH REMOTE CONTROL

Point the remote control handset directly towards the fire and press the appropriate button to operate the fire. **The fire will respond with a beep to accept the new programmed setting.** The handset has a memory function which will restart the fire with the last settings except for the Sleep timer function which will always reset to OFF.







#### POWER

The Power button turns the appliance ON or OFF.












#### MODE

The mode button is used to cycle through the 4 available setting modes – Flame , sleep timer , heat  and sidelight .








#### FLAME

When the flame icon  is selected, the flame colour icon  will blink for 5 seconds. During this period the flame colour can be changed using the  or  buttons to select one of the four available flame effect settings ( Orange,  Blue,  Orange & Blue,  dynamic) or OFF. If no buttons are pressed within 5 seconds the flame segment icon will stop blinking and the flame colour will be set to memory. To change the flame colour again press the cycle button  which will blink the flame segment icon allowing the flame colour to be changed.







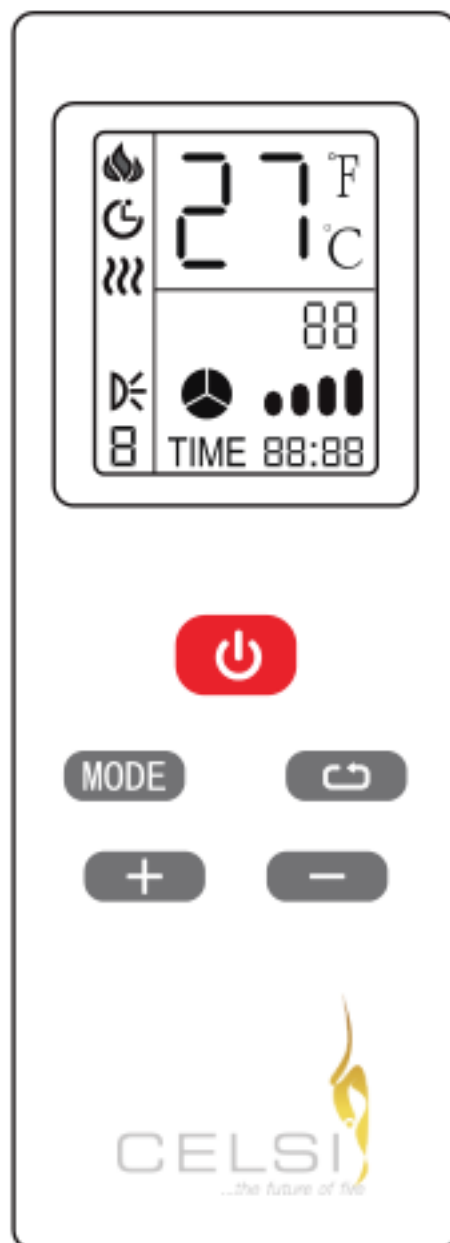

#### SLEEP TIMER

When the timer icon  is selected, the 00 icon will blink, pressing the  or  buttons within 5 seconds will adjust the sleep timer range from 1-8 hours. If no buttons are pressed within 5 seconds the timer icon will stop blinking and the timer will be set to memory. To change the timer again press the cycle button  which will blink the timer icon allowing the duration to be changed. To switch off the timer function set this to 00.




### HEAT

When the heat icon  is selected and blinking, pressing the  or  buttons within 5 seconds will adjust the heat output between Low Heat (0.75kW) , High Heat (1.5kW) , and OFF (OF) options. If no buttons are pressed within 5 seconds the heat icon will stop blinking and the heat output will be set to memory. To adjust again press the cycle button  which will blink the heat icon allowing the heat output to be changed.










Pressing the cycle button  switches between heat output and room temperature setting.

When the temperature display  blinks use the  or  buttons within 5 seconds to set the desired room temperature (18°C to 27°C)




**NOTE: If the set temperature display on the handset is below the current room temperature then the heater will not operate until the room temperature has dropped. The product has a 10% tolerance on cycle temperature.**







To switch the display temperature between Celsius and Fahrenheit, press and hold the  button for 5 seconds.

### SIDELIGHT

When the sidelight icon  is selected, the sidelight colour icon  will blink for 5 seconds. During this period the sidelight colour can be changed using the  or  buttons to select one of the four available sidelight effect settings ( Orange,  Blue,  Magenta,  dynamic) or OFF. If no buttons are pressed within 5 seconds the sidelight colour icon will stop blinking and the sidelight colour will be set to memory. To change the sidelight colour again press the cycle button  which will blink the sidelight colour icon allowing the sidelight colour to be changed.

### Setting the Clock

Press and hold the cycle button  for 5 seconds until the day number flashes. Using the  or  buttons set this between 1 and 7 to represent the current day of the week (1 – Monday, 2 Tuesday, 3 Wednesday etc.)

Press the cycle button  to highlight the TIME hour display and set using the  or  buttons. Press the cycle button  to highlight the TIME minute display and set using the  or  buttons. Leave for 5 seconds to lock in the settings.

### Energy saving function

If the heater detects a drop in temperature caused by an open window or door whilst in heat mode it will shut off the heater followed by 3 beeps. To restart the heater press the flashing heat button.

### IMPORTANT

This appliance is fitted with an automatic thermal cut-out safety feature to reduce the risk of damage to the appliance in the event of overheating e.g. when covered. If the thermal cut out has detected an abnormal temperature rise within the appliance it will beep and shut off the fan heater preventing it from restarting.

If this occurs switch off the fire using the ON/OFF switch, unplug from the socket and allow the appliance to cool. Ensure that there are no obstructions to the fan heater outlet or fan blades etc. Once cool, the thermal cut-out will have reset allowing you to continue safely using your fire.

If the heater is still not operating correctly after 20 minutes disconnect the appliance and call customer service.

## MAINTENANCE INSTRUCTIONS

- Always remove the plug from the socket-outlet and allow the heater to cool down before cleaning it.
- Wipe the exterior surface of the appliance occasionally with a soft damp cloth (not dripping wet) and dry the exterior surface before operating the heater.

### WARNING!



- Do not immerse the heater in water.
- Do not use any cleaning chemicals such as detergents and abrasives.
- Do not allow the interior to get wet as this could create a hazard.

- Light accumulated dust may be removed from the appliance with a soft dry cloth.
- To store away the appliance put it back in to its original packaging and store it in a clean dry place.
- In the event of malfunction do not try to repair the heater yourself as this may result in a fire hazard or electric shock.

**NOTE:** The blower motor and flame motor are pre-lubricated for a durable period of time and need no further lubrication or maintenance. As the dust particles will accumulate on/in the fireplace, so periodic cleaning/ vacuuming of the fireplace is recommended.

## ENVIRONMENT



Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection services available in your local area. If electrical appliances are disposed of in landfills or dumps hazardous substances can leak into the groundwater and get into the food chain, thus damaging your health and wellbeing. When replacing old appliances with new ones the retailer is legally obligated to take away your old appliance for disposal free of charge.

## QUALITY GUARANTEE

Congratulations on the purchase of your electric fire. This fire by BFM Europe Ltd is guaranteed for 3 years from the date of purchase against faulty materials or workmanship.

If purchased in the UK please note the 3-year guarantee comprises of 12 months of parts and labour with an extended 24 months of parts only. If your fire is found to be defective within 12 months from the date of purchase, we or our authorized agent will repair the faulty component on site.

This warranty does not cover consumable items which have a limited lifespan. If a problem should occur, the nature of the problem together with the date of purchase and installer information should be immediately reported to the retailer that the fire was purchased from. Proof of purchase will be required so the original invoice should be retained.

BFM EUROPE LTD  
GORDON BANKS DRIVE, TRENTAM LAKES  
STOKE-ON-TRENT  
ST4 4TJ

Technical Queries: 01782 339039

Service Fault Enquiries: 01782 339008

Please note there are no user replaceable parts on this appliance.

Issue 5