



At the heart of your home

# Proflame 1000

Natural Oak Fuel-bed Layout

## Layout Contents




**NOTE:** The logs have been selected and identified specifically for the following layout however, the layout is completely customisable and can be arranged as desired.




At the heart of your home

## Suggested Log Layout

As previously mentioned, the layout of the logs is completely customisable and can be arranged as desired however, please see steps 1 - 16 below for our recommendation.

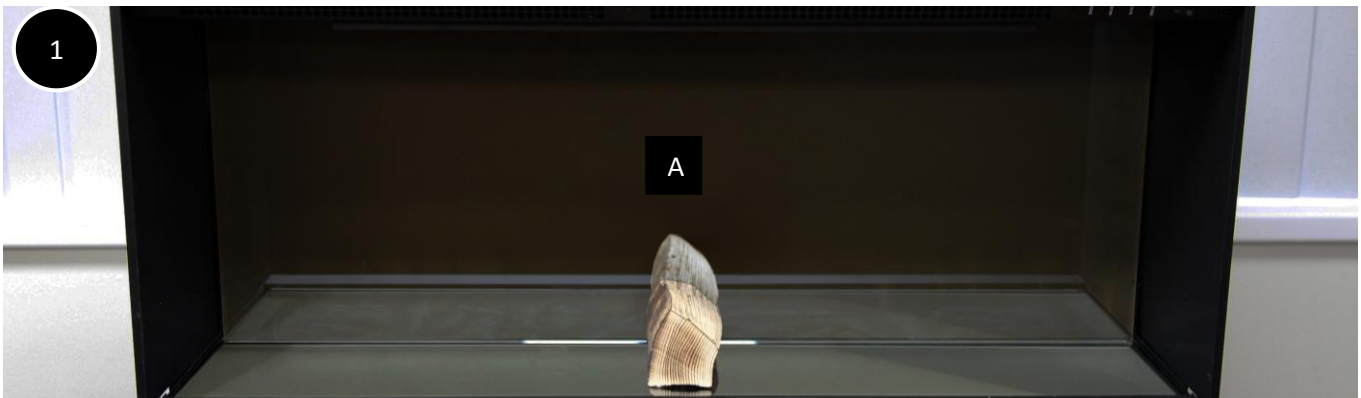

Position **Log A** in the centre of the fuel bed. Make sure it is pushed back close to the rear screen.

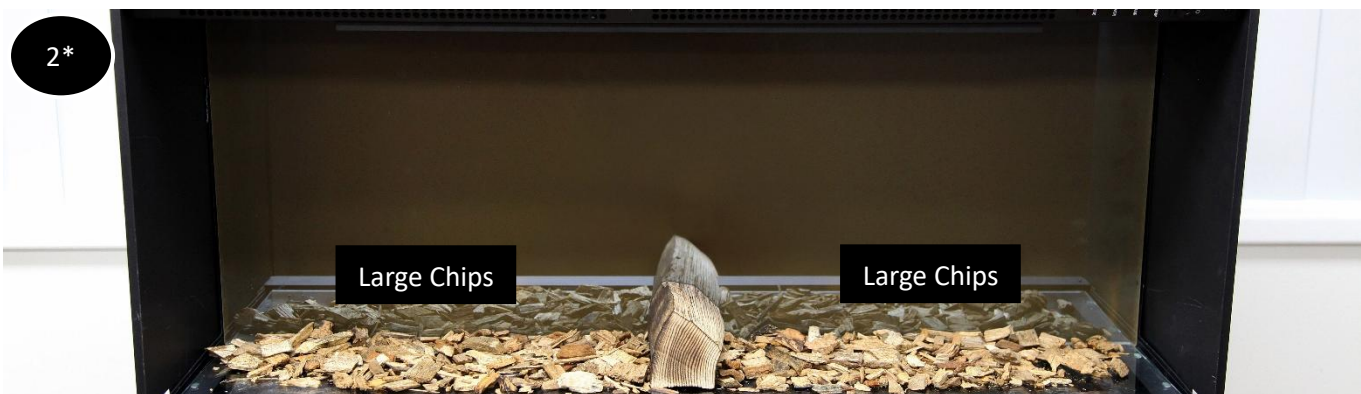

Add the large chips either side of **Log A** ensuring the chips are spread evenly. \*Retain a small quantity (minimum half a bag) to be used later in **Step 16**.





At the heart of your home

4



5



6



7







At the heart of your home

8



9



10



11





At the heart of your home

12



13



14







At the heart of your home

## Finishing Touches...

Large Wood Chips



Carefully add the "Small wood chips" **(15)** around the edges of the fuel bed.

**Note:** - Take extra care to minimise dropping any of the chipping in the gap / Glass retaining channel at the front of the fire.

Small Wood Chips



15



16



Now add a few extra pieces of the large wood chip on top of the small wood chips. This helps to create a more natural finish.

Clear the glass retaining channel of any 'Chippings' that may have dropped in. Re-install the glass...



At the heart of your home



... sit back and **marvel** at your creation!

---

## All Done!

### SHARE IT!

Go on, its time to brag! We'd love to see your masterpiece. Share it on social media. Don't forget to use the hashtags

**#Flavelproflame   #myFlavelectric   #Flavelfires**



BFM Europe Ltd  
Trentham Lakes  
Stoke-on-Trent  
ST4 4TJ

Tel: 01782 339 000  
Email: [sales@bfm-europe.com](mailto:sales@bfm-europe.com)

**1167-1045126 -01**