


FASCIA INSTALLATION INSTRUCTIONS FOR ELECTRIFLAME VR ACERO TRIM VARIANTS

TOTAL NUMBER OF MAGNETS:

18 x 6mm MAGNETS

10 x 3mm MAGNETS

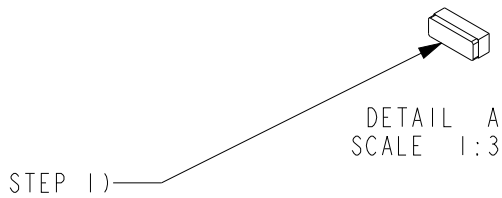

INSTALL THE FRET
USING 1x3mm AND 1x6mm MAGNET
IN EACH CORNER STACKED
AS SHOWN IN DETAIL 'A'

(A TOTAL OF 4 x 6mm MAGNETS
AND 4 x 3mm MAGNETS)

SEE DETAIL A 

STEP 2) 

INSTALL THE INNER TRIM,
USING 4 SEPARATE 3mm
MAGNETS PLACED UPON THE
FRET AS SHOWN.

THEN PLACE 1x3mm AND 1x6mm
MAGNETS STACKED AS SHOWN IN
THE TOP LEFT AND RIGHT CORNERS

STEP 3) 

INSTALL THE OUTER TRIM,
USING 3x6mm MAGNETS STACKED
IN EACH CORNER AS SHOWN