

Proflame SL



Log Installation Guide

Part No. 1167-1046695

Issue 1

Step 1: Remove the Glass

- Locate the **8 screws** holding the **3 glass-retaining brackets**.
- Remove these screws carefully. (see figure 1)
- Lift off the glass panel and place it somewhere safe.



Figure 1: Glass retaining screws to remove

Top Tip:

For **Step 2**, it's easiest to work if you gently lean the fire back and install the logs while in a reclined position.



Step 2: Install the Logs

- Add a **small amount of vermiculite** evenly across the base (this is Step 1 in figure 2).
- Follow the diagram's Steps 2–4 to place each log in the correct position.
- Adjust the logs slightly if needed to achieve the desired appearance.

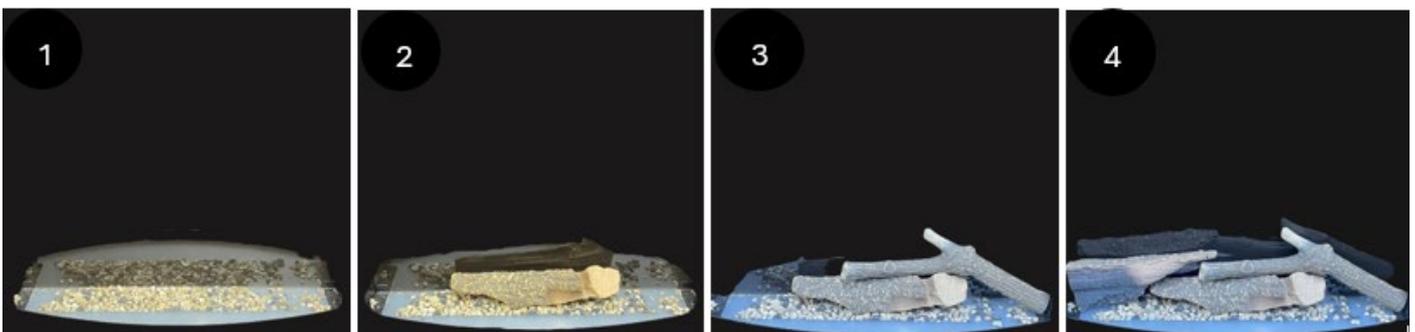


Figure 2: Log Layout

Proflame SL

Log Installation Guide

Part No. 1167-1046695

Issue 1



Step 3: Reinstall the Glass

- a) Place the glass panel back onto the fire. Reattach the **3 retaining brackets** and tighten the **8 screws** securely.

Step 4: Finish With Vermiculite and Log Chippings

- a) Add a **small amount of vermiculite** in front of the glass.
- b) Add **small decorative log chippings** to complete the look.



Figure 3: Complete Log Layout
